

Disable X Power Music Sense

Remove Jumper
from CON100

